

US Speedo Removal and Install Guide

09-13 Dodge Ram



09-13 Dodge Ram



4. Rmove the trim.



8. Use a tool to remove the top lens from the speedometer.



12. Remove each needle with the same techique.



1. Take a picture of each needle with the key off. You will need this when you install the gauge face.



5. Remove the screws holding the cluster in place. 7mm screws



9. This is a little tricky, there are many of these to release.



13. The trip button. Lift up, you may need a pry tool to pull out of the hole.



2. There are 3 hex heads screws to remove.



6. Push in on the top of the plugs to release the wire connectors.



10. With the lens off, twist the needles down past the low stops.



14. After the trip is out, switch to the back side to remove the back plastic.



3. Remove the trim. The bottom of the trim part is hold in with snaps



7. Make sure the key is off when removal of the cluster. Take a picture of each needle location with the key off.



11. Twist and pull at the same time. Grab the hub with your fingers and lift up.



15. Use a toold to release the tabs and remove the back side.



US Speedo Removal and Install Guide

09-13 Dodge Ram



16. Remvoe the back plastic.



20. Remove the trim part.



17. Press on the tabs around the outside to remove the board from the plastic.



21. Remove the Gauge face and replace with the new US Speedo Gauge Face.



18. Do not break the tabs, they are needed to secure the board in place.



with clips. Press in to release the clips.

These are one of the more difficult gauge face installs.

If you have questions or need help, contact US Speedo Tech Support.

Professional installation is available for \$49 + shipping. Send to US Speedo





US Speedo Removal and Install Guide



- 5. With the key ON. Set the Tach Needle as shown. **DO NOT** twist the needle after it starts to stick on the shaft.

8. Set the Speed and Oil needle as shown with the key ON.

6. Set the Volt gauge if your cluster has one as shown.



9. With the key OFF. Set the Fuel and temp needle.

7. When you turn the key off, you can set the needles will move. This is where they will be with the key off.

10. When you have all the needles on. Unplug the cluster and plug back in. Check to ensure each needle is EXACTLY as shown here.

11. If the needles are wrong, UNPLUG the cluster. Remove the wrong needle only, and start at step 1 for that needle.