

## Gauge Face Install Guide

## 03-07 GM TRUCK / SUV Daytona, Escalade, SS Kit, Aqua Kit



1. Bring cluster inside to a clean area to start the install.



5. Twist each needle down past the low mark.



9. Remove all the needles.



13. Put on the gloves before touching the stainless steel.

Tech Support 810.244.0909




2. Make sure you have the needle positions marked. Should all be at low.



6. This will break the needle free from the shaft of the stepper motor.



10. Remove the factory gauge face.

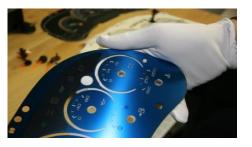

14. Only hold the gauge face by the edges.



3. Use the needle tool to help remove the clear lens.



7. Use the needle tool to remove the needles.



11. Open the US Speedo gauge face package.



15. Push the alignment tabs in place.



4. Cluster with the lens off.



8. If the needles are hard to remove, twist and lift at the same time.



12. Only the SS and Aqua Kits come with gloves to protect from fingerprints.



16. Place the New US Speedo Gauge Face in place.



## Gauge Face Install Guide

## 03-07 GM TRUCK / SUV Daytona, Escalade, SS Kit, Aqua Kit

Take Cluster and Needles out to the truck and plug in. Leave Gloves ON.

17. Make sure the key is in the OFF position.



21. All of the needles should be in the same position as when you removed them.



25. Unplug the cluster, place on a flat surface. Use the handle of the needle tool.




29. Snap the lens in place.



18. Start setting the needles in place.



22. UNPLUG the cluster. Gently move the needles so they point up.

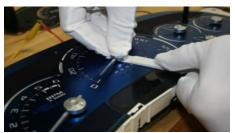

26. Push the hubs down till they are touching the handle.



30. Take back to truck. Leave the key off and connect.




19. Hold the tip over the 0 and push straight down on the hub.



23. Plug the cluster back in, the needle should go back to the same mark as on your diagram.



27. Optional Lens.

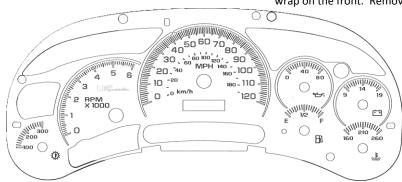



20 Only push down a little bit for now, they will be easier to remove if required.



24. If the needles are not correct, remove and unplug the cluster and go back to 17.



28. Some of the lenses have a clear protective wrap on the front. Remove.

2 of 2

Tech Support 810.244.0909